



# Live Line Monitor LLM Module

## Application

The Bramco Live Line Monitor provides a remote visual display of the status of each phase of a 3 phase AC load circuit.

## Features:

The LLM Module is a compact, DIN or screw mounted, low power, three phase input device to provide visual indication of load phases being present.

The three load phases and Earth are connected to the LLM module.

The Remote Display Indicator is mounted on the door panel and connects to terminals on the LLM Module.

## Normal:

- No AC - three phase LEDs should be Off.
- AC On - the three phase LEDs will be On.
- If any or all the LEDs are On, the circuit is alive.

## Fault:

- If any or all of the three phase LEDs are On, indicates a load phase not isolated.

## LEDs for:

- Phase A U
- Phase B V
- PHase C W

**Note:** Dual LEDs for each phase.

## Easy Installation:

Mount the LLM module close to the point of connection. Connect the 3 phase wires and the Earth Wire.

**Note:** For safety this earth must be fitted.

Fit the LLD Remote Display into 22.5mm hole provided on the panel facia. Connect the Remote Display wiring to the LLM Module.

## Specifications

### A00971

**System Voltage -** 660 - 1100vAC 50/60Hz  
**Phase Voltage -** 375 - 635vAC

**AC Voltage -** 1000vAC 1 minute (PH to E)

**Phase Loading to Earth -** 100k Ohms at 50Hz

**DC Voltage -** 2000vDC 1 minute (Ph to E)

**Phase Loading to Earth -** 20M Ohms at DC.

■ Local/Remote Display have dual LEDs for each phase.

■ Remote Display Touch Potential - 24vDC maximum when earth is connected

**Operating Temperature -** 0 - 50°C

### Enclosure LLM Module

- 55W x 75H x 110D
- High impact resistant polycarbonate
- DinRail and screw mounting
- Cage screw terminals
- Weighs 250gms

### Enclosure Remote Display

- Panel cutout 22.5mm diameter
- Bezel 30mm diameter x 20mm projection
- Depth 50mm excluding 4 wires
- Connection through 2m x 4 cores cable
- Weighs 100gms

## Ordering Information


A00971 LLM Module 660 - 1100vAC

A00739 LLD Remote Display



# Live Line Monitor LLM Module

### Connection Details

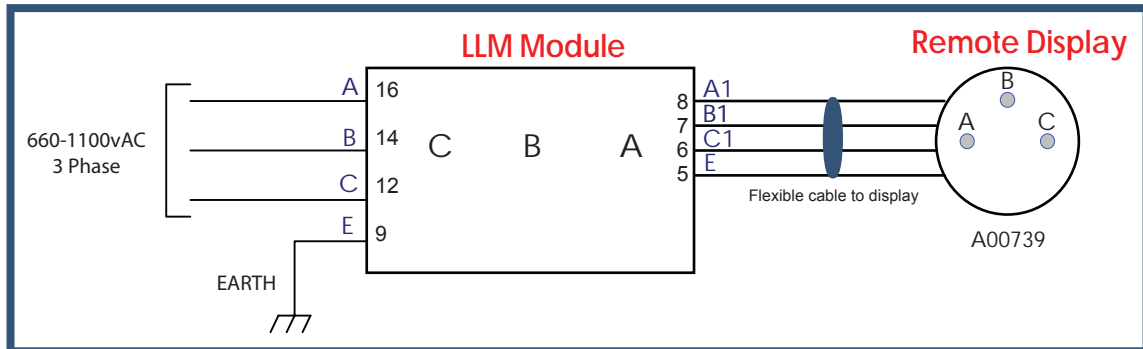

### Bramco Contacts

#### Head Office

Bramco Electronics  
ABN 49 327 604 798

2 Callistemon Close  
Warabrook NSW 2304  
PO Box 241 Hunter Region MC  
NSW 2310 AUSTRALIA

Telephone +61 2 4014 4444  
Facsimile +61 2 4967 4100  
Email sales@bramco.com.au  
www.bramco.com.au

#### Distribution Locations Australia:

- Newcastle NSW
- Wollongong NSW
- Cairns QLD
- Brisbane QLD
- Perth WA
- Emerald QLD
- Cumberland Park, SA

#### South Africa:

- Heidelberg - Emis Sales
- Delmas - Bramco South Africa

#### USA:

- Bland VA

#### Brazil:

- Belo Horizonte - Genesis

